

 
## Use and Disposal USD D npr PRTW


D npr = D-type without automatic pressure relief function

## **USD D npr PRTW - Instruction** for use

- 1. Break and remove the snap cap.
- 2. Push the dispense head into the fitting on top of the keg.
- 3. Hold the keg fitting with one hand, and turn the dispense head with the other hand until it stops.
- 4. Push down the dispense head handle. The keg is now ready to dispense.






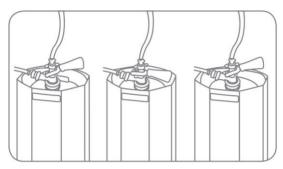

## **USD D npr PRTW - Instruction** for disposal

- 1. When the keg is empty, pull the dispense head handle upward, turn the dispense head counter-clockwise and gently remove it from the keg.
- 2. Push the depressurising tool (PRTW) into the fitting.
- When fully depressurised, flatten the petainerKeg<sup>™</sup>.
  Send the keg for recycling in accordance with local recycling rules and regulations.
- 4. Alternative before disposal: Remove the depressurised keg from its outer casing. Using pliers, remove the pin securing the keg top, and detach. Flatten the petainerKeg™ and the polypropylene casings.

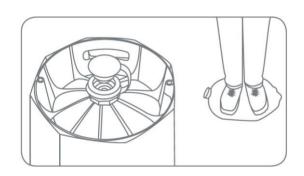



























The petainerKeg™ USD D npr (without automatic pressure relief function) can be uncoupled and recoupled for cleaning of the dispense line, or for other reasons.

Take care. The petainerKeg™ is under pressure.

15/12



