



Video Instructions





Use and Disposal Hybrid Keg with D-Type Fitting

Sterility & cleaning procedure

As with all keg dispensing, please ensure that the dispense head, the keg fitting and all pipes have been cleaned and sterilized. For cleaning the fitting, we recommend 70% ethanol (see Petainer Keg Sanitising Guidance for Filling and Dispensing).



Instruction for use

1. Break and remove the snap cap and follow procedure above.
2. Push the **D-type** dispense head into the fitting on top of the keg.
3. Hold the keg fitting with one hand and turn the dispense head clockwise with the other hand until it stops.
4. Push down the dispense head handle. The keg is now ready to dispense.

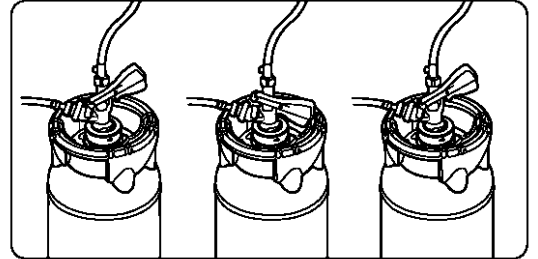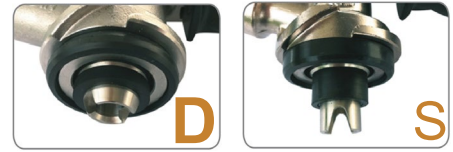

Instruction for disposal

1. When the keg is empty, pull the dispense head handle upward, turn the dispense head counter-clockwise and gently remove it from the keg.
2. Push the pressure relief tool (PRT) into the fitting (Fig.1) **or** Push a reusable depressurising tool (Keg-Entlüfter) into the fitting. Hold the keg fitting with one hand, turn the depressurising tool with the other hand clockwise until it stops and turn the screw clockwise until the pressure is released (Fig.2)
3. When **fully depressurised**, disassemble the Hybrid according to the disassembly pictograms and send for recycling in accordance with local recycling rules and regulations.

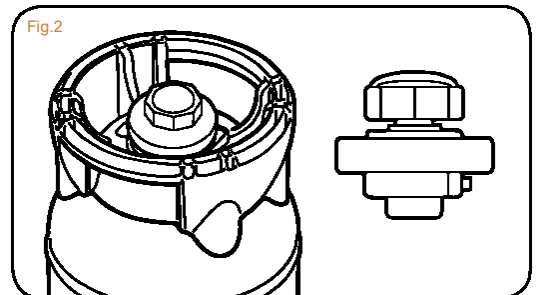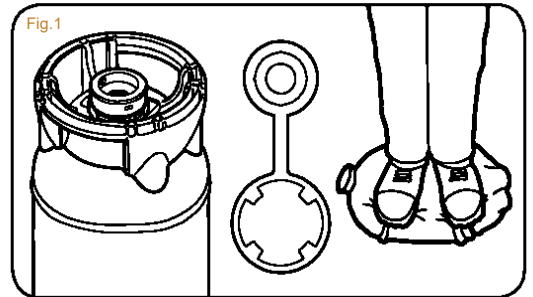

Hybrid disassembly pictograms:

(Please use also the Hybrid disassembling video - QR code below)



The Petainer Keg Hybrid D-type can be disconnected and connected for cleaning of the dispense line, or for other reasons.

Take care. The Petainer Keg is under pressure.